




Installation Procedure

Watson Bowman Acme Corp. 95 Pineview Drive Amherst, NY 14228

phone: (716) 691-7566 fax: (716) 691-9239

website: www.wbacorp.com

Information provided herein, including but not limited to, any drawing, design, photograph, graphic, or statement(s) ("Materials") are proprietary and the property of Watson Bowman Acme Corporation ("Company"). Reproduction, translation, or reduction to any electronic medium or machine readable form, in whole or part, is strictly prohibited, except for the express purpose for which it has been furnished, without prior written consent of Company. All Materials contained herein are provided by Company for information purposes only. Company reserves the right to amend or withdraw any information contained in the Materials without notice. All technical or other advice by Company, whether verbal or written, concerning products, or the use of products in specific situations ("Advice") is given by Company and is used at the Users own risk.

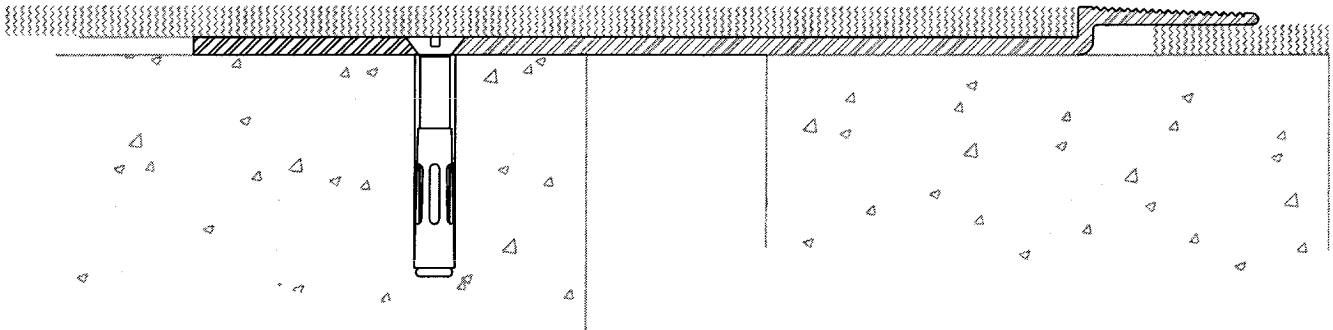

Wabo® FastFloor Series Model(s) FJS Horizontal Expansion Control Systems

The following installation procedure is very important and must be fully understood prior to beginning any work. To ensure proper installation and performance of expansion joint system the following actions must be completed by the installing contractor. Failure to do so will affect product warranty.

 
- 1) Carefully read and understand installation procedure. Contact WBA's Technical Service Department at (800) 677-4922 for product assistance.
- 2) Inspect all shipments and materials for missing or damaged components and hardware. Contact Customer Service at (800) 677-4922 with WBA's order number and invoice for prompt assistance.
- 3) Inspect substrate or adjacent construction for acceptance before beginning work. Report unacceptable construction to the project manager for scheduled repair work.
- 4) Review WBA shop drawings for project specific detailed information if Engineering services were purchased at time of order.

Standard components


Sheet

1
of 2

Watson Bowman Acme Corp.
95 Pineview Drive, Amherst, NY 14228
phone: (716) 691-7566 fax: (716) 691-9239
website: www.wbcorp.com




Anchor
(Varies according to job specifications)

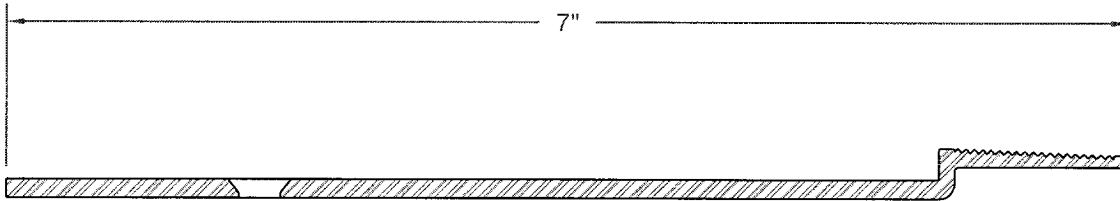


Floor Cover

Installation procedure: FJS FastFloor System


Watson Bowman Acme Corp. reserves the right to amend or withdraw any information contained herein without notice and will not be responsible for any inaccuracy or ambiguity of any information contained herein.

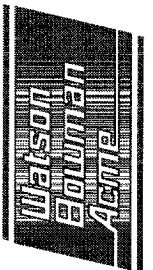

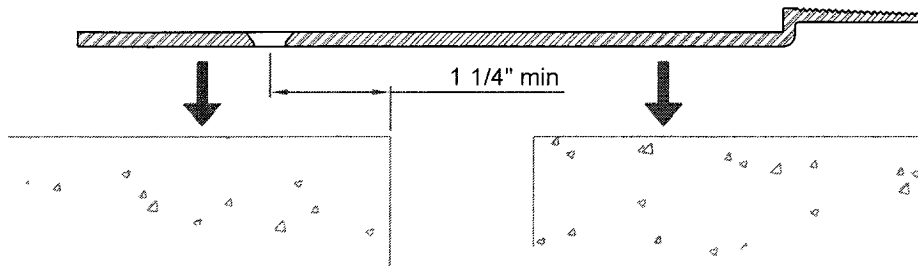


1

Make sure that the floor is level. High spots should be ground down and low spots filled in. Cut and fit expansion joints to required length. If installing more than 1 piece lay out entire run to insure proper alignment. Make sure that the anchors are at least 1 1/4" from floor gap wall.

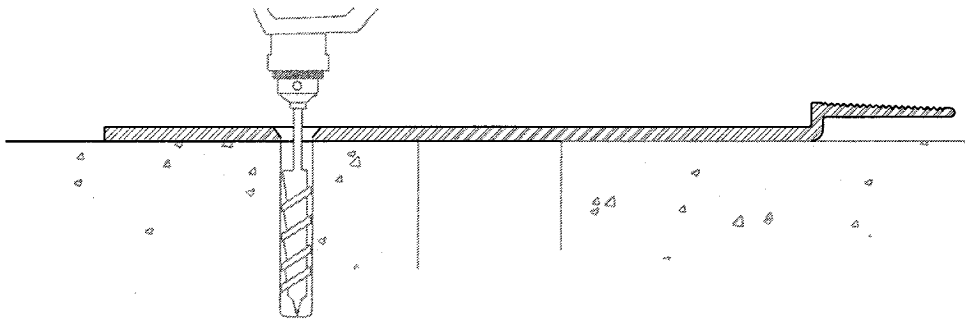


2

Drill end holes first. This insures that the expansion joint will not move and alignment with other joints is obtained. Follow anchor manufacturer's recommendations for drilling operation. Drill holes to proper depth and clean out holes.

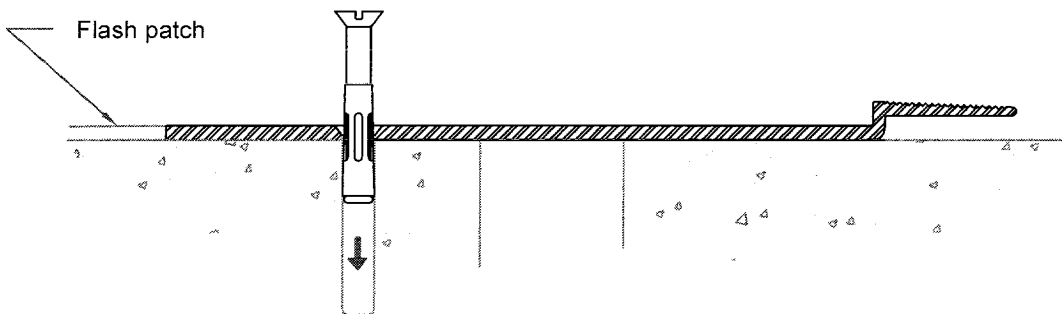

3

Follow anchor manufacturer's recommendations for proper anchor installation. Once anchors are in the end holes, drill remaining holes and install remaining anchors. Flash patch on anchored side and feather back 2-3 ft to assure a smooth transition.

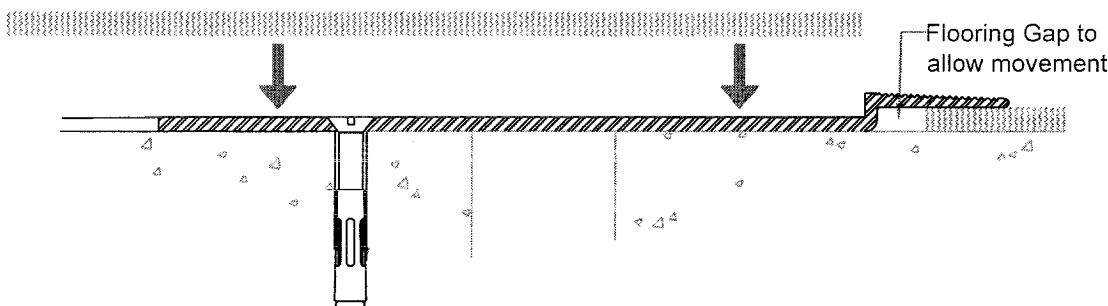

4

Cut in floor covering, make sure it abuts tightly to the edge of the wing on the fixed portion of the expansion joint. The floor covering should extend only halfway under the unsecured wing (note open space in diagram).